

OPERATING INSTRUCTIONS - EMTEC OPTICAL DISK (for all models)

1. Checking

Compatibility:

- Check that the disc format (CD, DVD, Blu-ray) is supported by your player.

Inspection visuelle :

- Examine the disc for dirt, cracks, or other damage.
A quick inspection can prevent damage to your optical drive.

2. Usage

Proper Handling:

- **Hold the disc by its edges:** Avoid touching the shiny surface to prevent fingerprints or scratches.
- **Place it on a clean surface:** Use a non-abrasive surface if you need to set the disc down.

Inserting the Disc into the Player:

- Place the disc in the tray or designated slot.
- Close the tray gently to avoid forcing the mechanism.

In any case, carefully read the instructions in the manual of your player or recorder.

Reading and Burning:

- Use appropriate software to read or burn files.
Ensure the process is not interrupted to avoid errors.

3. Maintenance and Storage

Cleaning:

- **Materials:** Use a soft microfiber cloth and a cleaning solution specifically designed for optical discs (or distilled water).
- **Technique:** Clean from the center outward in a straight line, never in circular motions.

Storage:

- **Cases:** Store each disc in a rigid case to prevent dust and scratches.
- **Position:** Store discs vertically in a dry location, away from humidity, heat, and direct sunlight.

4. Troubleshooting

Unreadable Disc:

- Clean the surface.
- Test the disc on another player.
- Ensure the firmware being used is up to date.

MANUFACTURER DECLARATIONS

EU Responsible person:

DEXXON GROUPE

79 avenue Louis Roche, 92230 Gennevilliers – France

support.emtec@dexxon.eu

USA/CANADA:

DEXXON DIGITAL STORAGE / DEXXON LOGISTICS

7611 Green Meadows Drive Lewis Center

OH 43035 – USA

EMTEC and EMTEC Logo are registered trademarks of DEXXON Groupe.

All other trademarks are the property of their respective owners.